


Change oil 1 to

2 times per year depending on mileage.

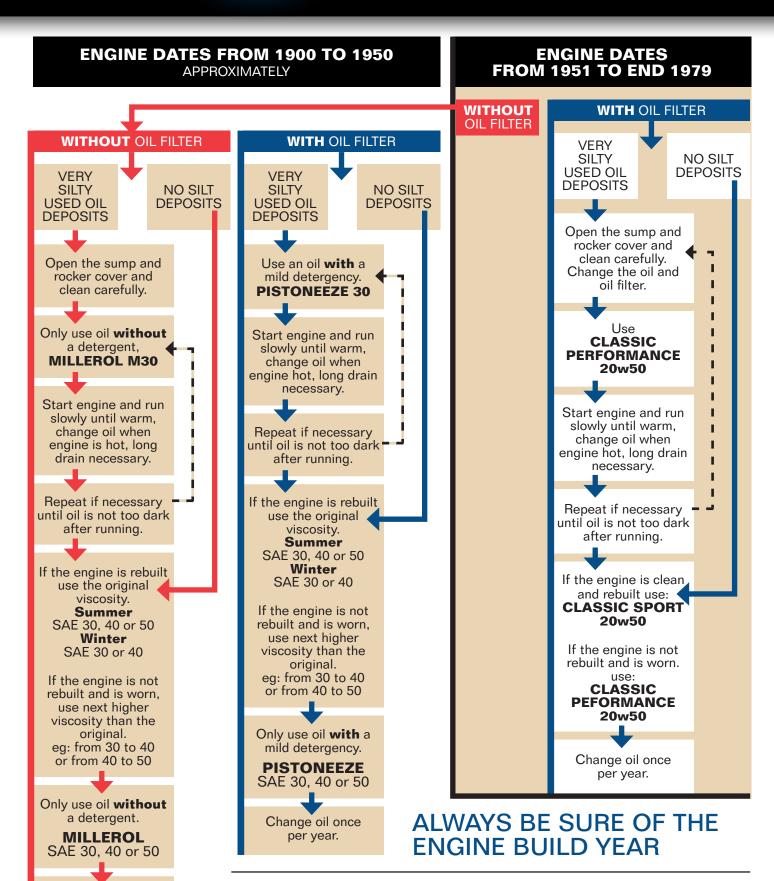

CLASSIC CAR OIL CHANGE GUIDE



The best time to change the oil is at the end of the driving season. Change the oil and run the engine until hot. Store the car. During storage never start and stop the engine without the oil reaching its normal operating temperature. Don't forget to change the gear and rear axle oils every 4-6 years. Change the brake fluid every year. Grease all necessary parts every year.

millersoils.co.uk